Installation and Connection to DTCOM Software

Description

Download DTCOM

DTCOM Download

Click on DTCOM_E.exe



• Select COM port (Refer to COM port driver installation guide) and then click on "Auto Detect".



• After detection of some controllers, in the "communication protol" section click on one the detected items and then click "SET" then "Close".

I	Communicate Protocol
No. of Concession, Name	



SET

CLOSE

Click on Monitor Icon.



- Select proper "Address". In hydrostatic pressure testers from AHP, there are "number of lines+1" station address, for example in 4 station hydrostatic unit there are 5 address. 1 to 4 is related to pressure lines and 5 is related to temperature address. Select requested address for calibration.
- For DSC-OIT tester there are 2 address, 1 & 2 . Selecting each of these numbers will connect DTCOM to sensor 1 and 2.



• In the bottom of page settings for the requested station address will be shown.

Control			Input			Manual	Alarm	PV tuning
Ctrl. Method	Manual	-	Input Type	K-Type	•	Output 1 % 0.0		PV Offset 0.0
Run/Stop	Run	•	Unit	C	-	Ctrl. Period1 4		Security
Out1	Heat	•	SV	0.0	-			Level 1 Key Disable -
0.10	Heat	•	Dange Li	1200.0	- 11	Output 2 % 0.0		Level 2 Key Disable -
Outz	neal		Range ni	11500.0	- 11	Ctrl. Period2 20		Level 3 Key Disable -
Lock Status	Normal	-	Range Lo - 200.0			Security Level		
			Pointer	1	-	Fune Out High 0		C Unlock All
						rune Out High o		C Read All, SV,AT
						Tune Out Low 0		C PV,SV
			F/W Ve	ersion 1.40				C All Lock



Calibration offset value. Be noted after set of proper value don't forget to "ENTER". Unless the value will not be saved.

• Don't change any other parameters of this page.

Category

1. Software Guide

AHP PLASTIK MAKINA