

How to Get Serial Number of Hardware Lock (Flash Disk) for Software Update

Description


For all of products of AHP that working with computer there is hardware lock (flash disk), in case of need to update new version of software to customer you need to give the serial of hardware lock. To give serial number you need to do as below:

1- If you already have one of the softwares related to AHP already installed on your computer, do as below:

Download Check key software from here:

[Download Check Key EXE](#)

Folder is like this:

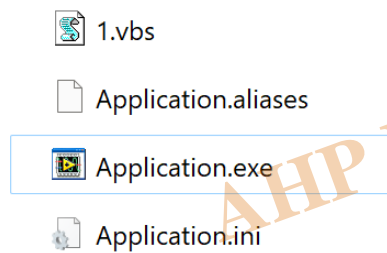


2- If you don't have one of the softwares related to AHP products installed on PC, download the link below:


Download the software for finding the key of your product from AHP:

[Download Check-Key Installation Software](#)


Unzip the folder and it is like below:

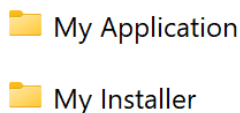

My Installer->Volume->setup.exe

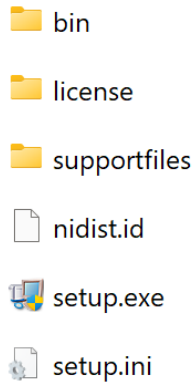


Install the software in the default root.

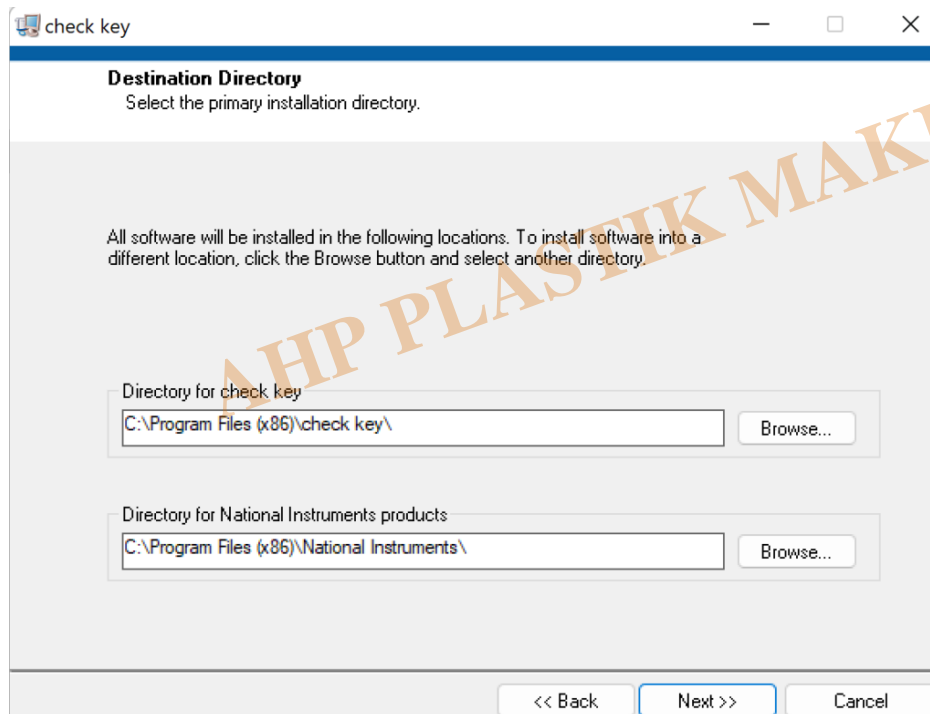

After installation completed run the software

Run the “application.exe”:

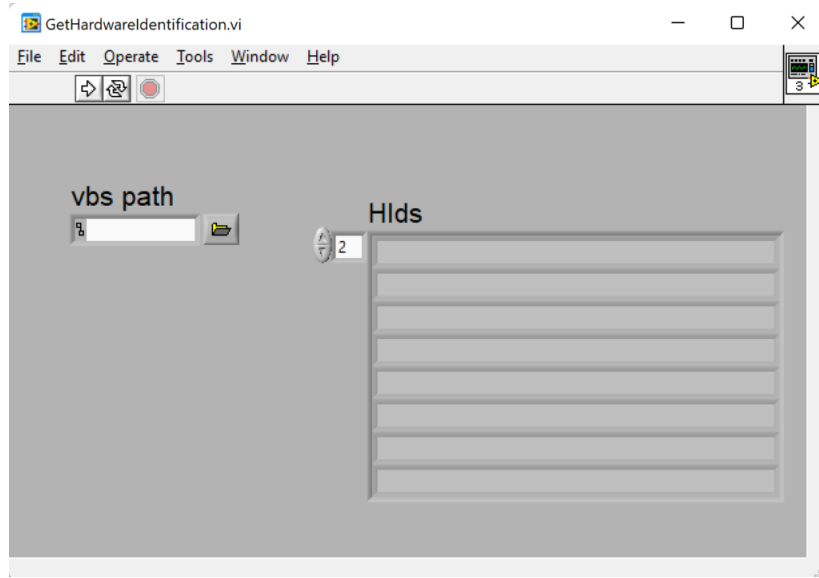

Using one of the two methods above, you will be able to run the “GetHardwareIdentification.vi”. After running this software you will do as following.

Insert flash disk (hardware lock) into the PC and click on “vbs path” and select the file “1.vbs” in the folder. Then click right arrow key on top left corner:



You will see some Hlds on the right table. Find the one that is related to hardware lock. To recognize which one is related to the flash disk, you can remove the flash disk from PC and run again. You will see one line will be dropped from table. That one is related to flash disk. You can connect flash disk to PC and run again to copy the line that is related to flash disk.

Copy the text of that line and send to us by email or WhatsApp as below:

Email: info@ahp-makina.com

WhatsApp: +905469180483

It will be checked in our database and if it is correct, you will get the update version of the software to download.

Category

1. Software Guide