


Installation and Connection to DTCOM Software

Description


- Download DTCOM

[DTCOM Download](#)


- Click on DTCOM_E.exe

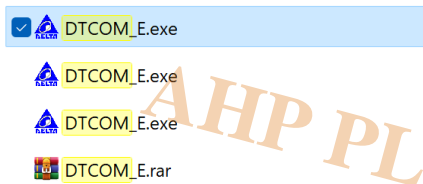

- Select COM port (Refer to COM port driver installation guide) and then click on "Auto Detect".

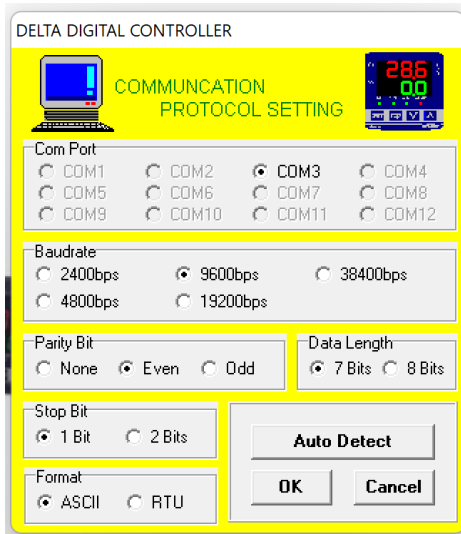

- After detection of some controllers, in the "communication protocol" section click on one the detected items and then click "SET" then "Close".

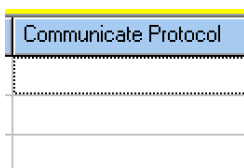

SET

CLOSE

- Click on Monitor Icon.



- Select proper "Address". In hydrostatic pressure testers from AHP, there are "number of lines+1" station address, for example in 4 station hydrostatic unit there are 5 address. 1 to 4 is related to pressure lines and 5 is related to temperature address. Select requested address for calibration.
- For DSC-OIT tester there are 2 address, 1 & 2 . Selecting each of these numbers will connect DTCOM to sensor 1 and 2.

Address 1 Cancel

PV 23.8 C

SV 0.0

Out1

Out2

Connect

- In the bottom of page settings for the requested station address will be shown.

Control Ctrl. Method Manual Run/Stop Run Out1 Heat Out2 Heat Lock Status Normal	Input Input Type K-Type Unit C SV 0.0 Range Hi 1300.0 Range Lo -200.0 Pointer 1 F/W Version 1.40	Manual Output 1 % 0.0 Ctrl. Period1 4 Output 2 % 0.0 Ctrl. Period2 20 Tune Out High 0 Tune Out Low 0	Alarm 	PV tuning PV Offset 0.0 Security Level 1 Key Disable Level 2 Key Disable Level 3 Key Disable Security Level <input checked="" type="radio"/> Unlock All <input type="radio"/> Read All, SV,AT <input type="radio"/> PV,SV <input type="radio"/> All Lock
---	--	---	------------------	---



Calibration offset value. Be noted after set of proper value donâ€™t forget to â€œENTERâ€œ. Unless the value will not be saved.

- Donâ€™t change any other parameters of this page.

Category

1. Software Guide

AHP PLASTIK MAKINA